


1. Remove the masking cover over the screw hole and attach the mounting bracket to the surface using screws.

2. Insert the extrusion into the brackets and set the light angle.

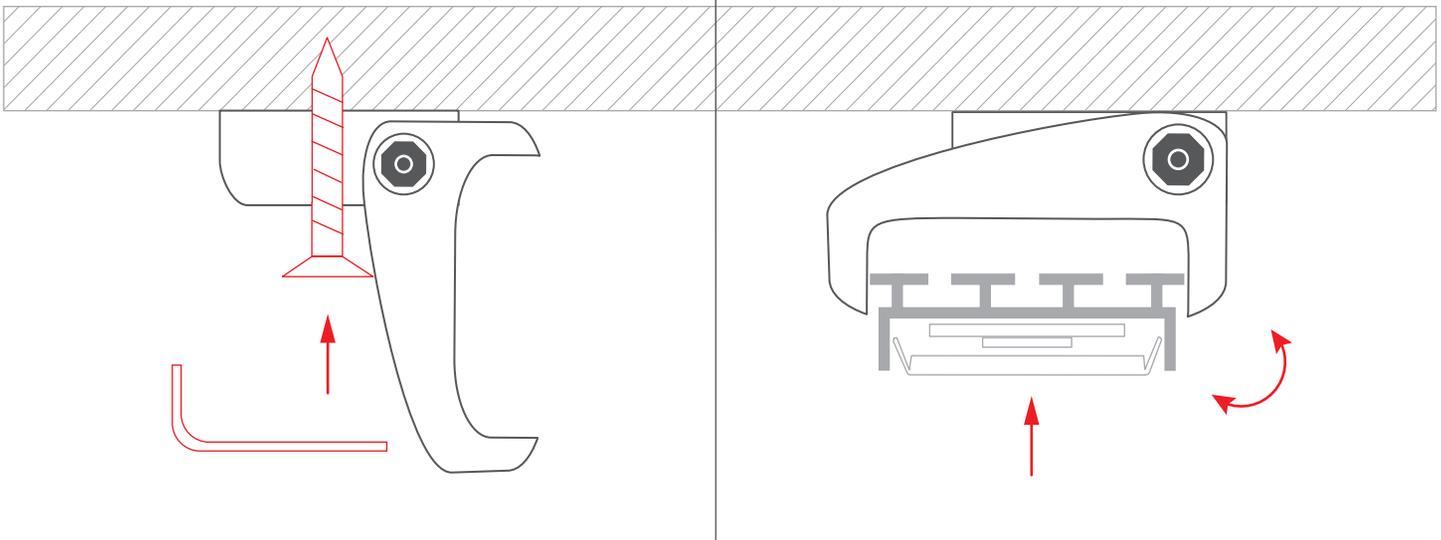

NOTE! A list of products corresponding with the selected accessories is available at www.KlusDesign.eu