



- 1. End cap*
- 2. Socket head bolt
- 3. Profile*
- 4. Cover*

*Other end caps, mounted with a socket head bolt along with corresponding profiles and covers are available at www.KlusDesign.eu.


IMPORTANT: Drawings of profiles and accessories in these instructions are simplified and only approximate the actual shapes.

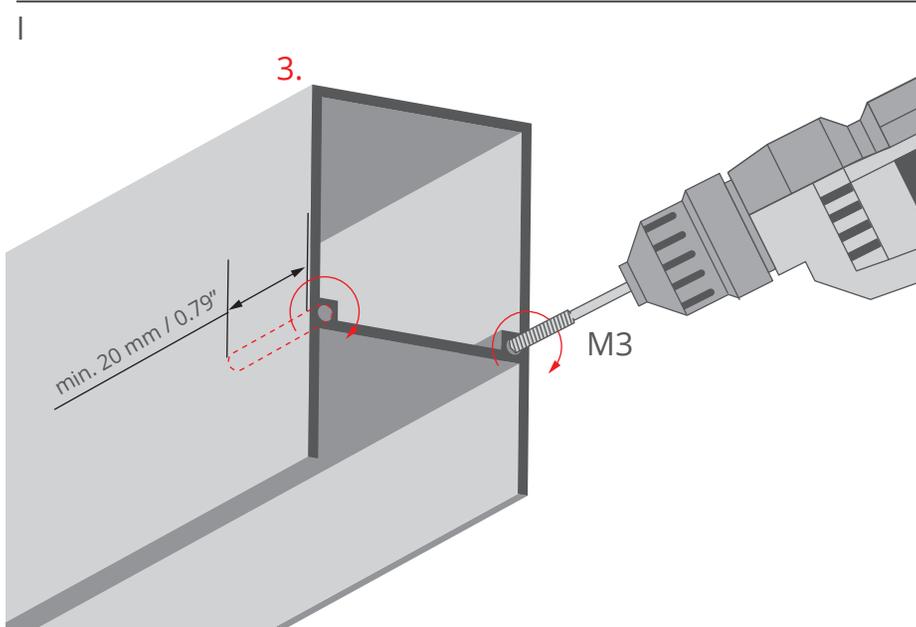

Thread the channels in the profile (3) with a M3 screw tap to a minimum depth of . 20 mm / 0.79"

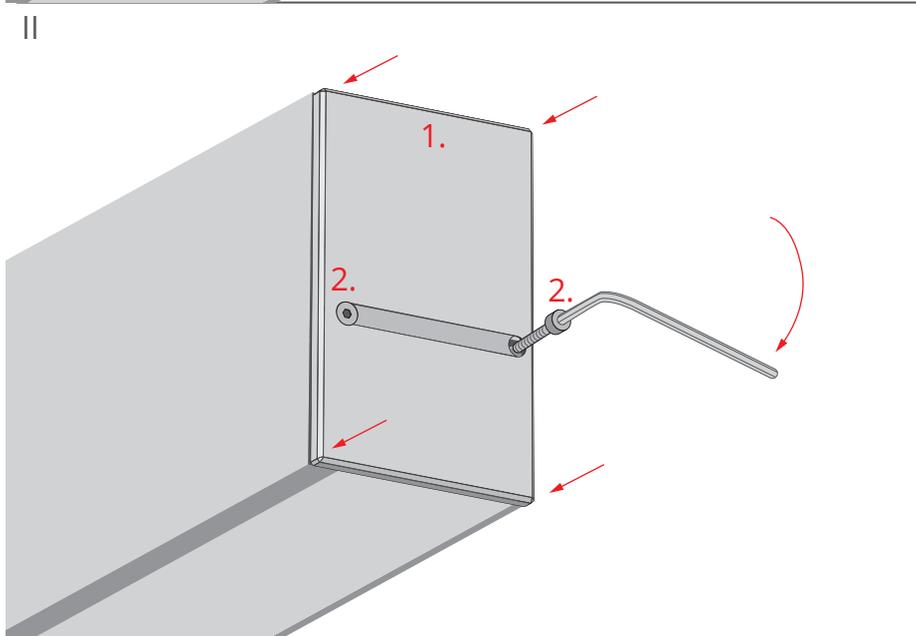

Mount and lock the end cap (1) in the profile by tightening the socket head bolts (2) with an allen wrench.

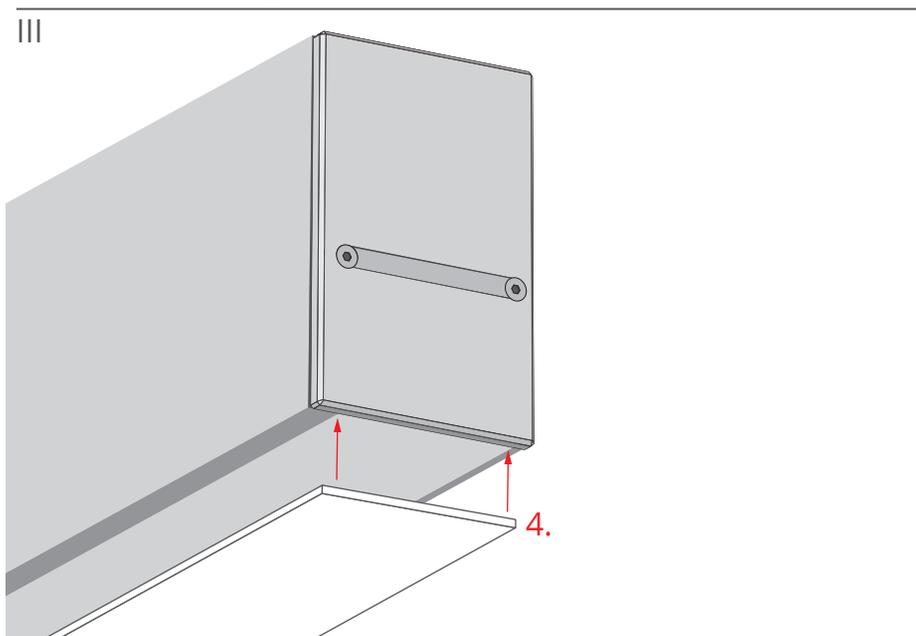

Mount the cover (4) in the profile.